



## Biometric Trigger Lock

A biometric trigger lock offers a secure method to protect your firearm from unauthorized access, such as children or individuals you want to limit access to. This lock is designed to be attached behind the trigger assembly of most firearms, ensuring safety while preserving the functionality of your firearm.

### Biometric Trigger Lock Instructions

Out of the box, the lock will unlock to any fingerprint used on the scanner. However, the lock needs to be programmed to recognize your specific fingerprint.

#### Programming Steps

1. Using any finger, unlock the lock and separate the two pieces.
2. Choose the finger that makes the most sense for you to access your firearm (most people find that the index or trigger finger is easiest).
3. Place the selected finger on the scanner and hold it there. The lock will illuminate green and unlock. Continue to hold your finger on the scanner.
4. The lock will then illuminate blue, signaling that it has entered programming mode.
5. Continue lifting and placing your finger on the scanner, ensuring that all angles of your fingerprint are captured.
6. Once all angles are captured, the lock will illuminate green again, indicating programming is complete.

#### Verification

1. Place any finger other than your programmed finger. The light should illuminate red, and the lock should not unlock.
2. Place your programmed finger on the scanner to verify that it illuminates green.

### To Install Your Lock

1. Place the lock BEHIND the trigger assembly of your firearm.

Scan for  
Step-by-Step Video:  
Learn How to  
Program & Verify  
Your Biometric  
Trigger Lock



2. Squeeze the two pieces together until they are firmly in place.
3. Your firearm is now secure!

### Find Additional Biometric Trigger Lock Guidance Below

#### Battery Life

1. The lock will remain charged for about one (1) year, depending on the frequency of use.
2. The unit will flash blue seven (7) times after locking or unlocking to indicate that the battery is low.

#### Charging the Lock

1. Plug the supplied charging cable into the USB-C port on the lock.
2. Connect the other end of the cable to a power source.
3. The lock will alternate between red, green, and blue lights while it is charging.
4. Once fully charged, the lock will illuminate a solid green light.

### Troubleshooting

#### Lock Not Unlocking or Illuminating

If the lock does not unlock or light up at all first, ensure it is charged by following the charging procedure.

#### Lock Not Recognizing Fingerprints or Unlocking

1. Open the door on the back of the lock.
2. Insert the provided key to manually unlock the device.